

6 Alarm Time Setting

Normal Display

Podržte [M] po dobu 3 vteřin

Alarm Time - Hour

Alarm Time - Minute

Alarm and Chime ON/OFF

- In 'Zero' Display, hold [R] and press [S/S] once: Chime will be on.
- Press [S/S] once again: Alarm will be on.
- Press [S/S] once again: Chime will be off.
- Press [S/S] once again: Alarm will be off.
- Release [R], the display changes to Normal Display immediately.

NOTE: The Alarm will be turned on automatically when any changes have been made to the Alarm setting. When the Alarm is turned on, an icon "A" will be shown. The Alarm will beep for 30 seconds at the preset time. Press [R] to stop the sound.

Alarm Test

- In Normal Display, hold [R] and [S/S] together, the alarm will "Beep" and alarm sounded.

Care and Maintenance

- This watch contains electronic components. Never attempt to open the case or remove the back cover.
- Avoid exposing the watch to extreme temperature, chemicals which will damage the watch.
- Keep the watch away from the conditions of strong electric field and static electricity.
- Avoid rough usage or severe impact. The watch is designed to withstand impact under normal use. It is advisable to subject it to severe impact or rough usage.
- Clean your watch occasionally with a soft moistened cloth only. Avoid using chemicals, especially soap as the waterproof gasket will corrode.
- Store the watch in a dry place when it is not in use.

WWW.EVERLASTWATCH.COM

RoHS

EVERLAST™ and the Ecom device™, CHOICE OF CHAMPIONS™ and GREATNESS IS WITHIN™ are trade marks of Everlast World's Boxing Headquarters Corporation and used under licence by LONGITUDE LIMITED.

Precautions for Straps

- Exposure to water often makes a strap fragile and it may soon tear.
- Don't apply perfume or moisturizers around your wrist as the chemicals can erode the metal, leather and plastic of watch straps.
- The strap's condition will depend on the owner's wearing habits as well as the climate of the place where the person lives. An original replacement on straps is possible to be re-ordered through an authorized service center.
- PU straps are usually very hardwearing, please wash them with mild soapy water only.
- There may be discoloration for light color and transparent straps after normal wear for some time.
- In case if there is any severe or persistent skin reaction, such as severe redness, itching, rash or hives, you should stop wearing this watch, and consult your doctor.

Precautions for Water Resistance

All EVERLAST watches are designed to withstand use as indicated on the below chart.

Indication	Water-related use		
Level of resistance	Light spray perspiration, light rain, etc	Bathing, etc	Swimming, etc
3ATM (30 meters)	✓		
5ATM (50 meters)	✓	✓	
10ATM (100 meters)	✓	✓	✓

- Water damage may occur if the push buttons are pressed under water.
- Should water or condensation appear in the watch, please check the watch immediately as corrosion of electronic parts can occur inside the case.

Precautions for Battery & EL Backlight

Battery Life

The battery in your EVERLAST watch is estimated to last for 2 years.

Battery Replacement

If the display dims or the EL backlight is dim, you are recommended to go to the authorized EVERLAST service center for correct battery replacement in order to retain a valid warranty and avoid any damage on the water resistance function.

WARNING!

Always keep watch batteries away from children. If swallowed, contact a doctor immediately. Batteries contain chemical substances. They should be disposed of properly according to local regulations.


EL Backlight

The illumination provided by the backlight may be hard to see when viewed under sunlight.

Specifications

- Digital movement
- Chronograph up to 23 hours, 59 minutes, 59 seconds
- Date
- Alarm
- PC case and PU strap
- EL backlight
- 3 ATM

* These specifications might be changed without prior notice.

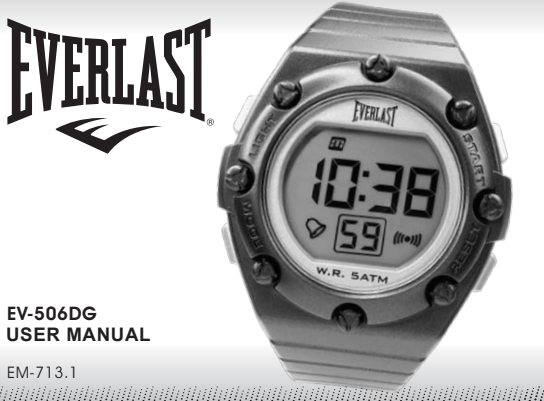

1 Design of the Watch

Děkujeme Vám, že jste si pořídili hodinky naší značky!
Prosím přečtěte si pečlivě návod, před prvním použitím.

Den v týdnu

Hodina a minuta

Podsvícení [L]

Mód [M]

Hodinové Upozornění

Denní Budík/Alarm

Start/Stop [S/S]

Reset [R]

Indikace dne v týdnu

Mód [M]

- Zmáčknete pro přepínání mezi Klasickým Displayem a Stopkami.

Start/Stop [S/S]

- Zmáčknete pro zobrazení měsíce, data a dne v týdnu.

Reset [R]

- Zmáčknete pro zobrazení času budíku/alarmu.

Podsvícení [L]

- Zapne podsvícení na dobu 3 vteřin.

2 Normal Time Setting

Normal Display

Hold [M] for 3 seconds

Alarm Time Setting

Scroll the setting by increment of 1

Scroll the setting faster

Day of Week

Day

Second

Month

Minute

Hour

3 12/24 Hours Reversal Option

- In Normal Display, hold [R] and then press [M] once. "A" or "P" mark will be appeared or disappeared.
- 12 hours mode, "P" will be present on the display.

12 Hours Mode

24 Hours Mode

- In Normal Display, hold [S/S] and then press [M] once.

5 Using the Chronograph

Chronograph Mode

1. Elapsed time

2. Accumulative elapsed time

3. Lap time (1 lap only)

Elapsed Time, Accumulative Elapsed Time and Lap Time

Stop Counting

Counting

5.1 Using the Chronograph

Chronograph Mode

Start Counting

Lap Counting

Stop Counting

5.2 Using the Chronograph

In Normal Display press [M] once, chronograph function will be set.

To Measure Elapsed Time and Accumulative Elapsed Time

- In 'Zero' Display, press [S/S] once to start the counting.
- Press [S/S] once to stop the counting. The elapsed time between the two 'start/stop' keystrokes will be shown on the display.

To Measure Lap Time

- When the chronograph is counting, press [R] once to measure and display the lap time.
- Press [R] once again to return to chronograph running display. Repeat the steps mentioned above to get accumulated lap time.

To Reset the Chronograph

- When the chronograph is stopped, press [R] to reset the chronograph.